# TELEDYNE ANALYTICAL INSTRUMENTS

Teledyne's Series 6000 Microprocessor Controlled Ultraviolet Photometer is designed to provide continuous on-line analytical data of critical process conditions and eliminate time consuming laboratory analysis. This analyzer can be configured to measure at any wavelength within the ultraviolet or visible portions of the electromagnetic energy spectrum.

Since numerous gases and liquids have a useful absorbance peak in the ultraviolet region, a wide variety of applications are possible.

### **Advantages**

- Dependable microprocessor-controlled analysis
- · Auto calibration and auto ranging
- Continuous real time analysis
- Eliminates time-consuming lab analysis

#### **Features**

- Microprocessor based, high resolution, ultra stable electronics (no potentiometers)
- Three user-selectable ranges
- Signal & Range ID output: 0-1 VDC and 4-20 mADC (isolated)
- · Programmable auto ranging
- Range ID contacts (quantity 4) Form A normally open contacts, 3A@250 VAC resistive
- Two adjustable concentration alarm set points with programmable relay function Form C contacts, 3A@250 VAC resistive
- Programmable auto calibration with mode ID Form A normally open contacts
- Remotely operated calibration (customer supplied valves and 24 VDC signal)
- Self diagnostics with Form C failure contacts
- Full duplex RS232 communication link
- Alphanumeric VF display for set-up and diagnostics
- Power: 115/230 VAC 50/60 Hz



### Series 6000

### **Ultraviolet Photometric Analyzer**

### **Principle of Operation**

The analyzer's optical path (figure 1) consists of a UV source, sample cell, and detector. A filter wheel located in front of the detector continuously rotates a reference and measuring filter in and out of the optical path.

The material of interest continuously flows through the sample cell where the optical energy is absorbed at the various wavelengths in accordance with its composition. The analyzer utilizes the reference wavelength to compensate for extraneous phenomena (turbidity, dirt on optics, source drift, etc.) thereby producing a high degree of stability over long periods.

### Series 6000

### Ultraviolet Photometric Analyzer

#### **CONFIGURATIONS**

6000: General purpose wall mount

6020: Totally explosion proof suitable for use in

Class I, Division 1, Groups B, C & D

Alternate configurations are available; contact the

factory.

#### **SPECIFICATIONS**

Noise:  $< \pm 1\%$  of full-scale

Drift: Less than 1% per day

Diurnal: Less than 1% per 20°F

Accuracy: ± 2% of full scale

Ambient: 32°F to 122°F

(0-50°C) non-condensing

Sample cell: Stainless steel with quartz window

standard. Other materials available.

Cell length: .01 to 40 inches

(application dependent)

Flow rate: 50 to 1500 cc/min


Light source: Tungsten lamp, mercury, deuterium

arc (application dependent)

Power rating: 115/230 VAC, 50/60Hz volts,

approximately 200 watts

Sensitivity: .02 to 3 absorbance units

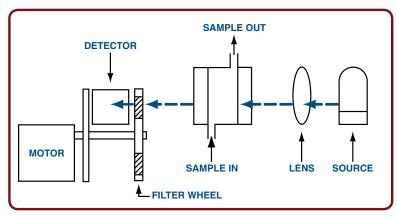

### **Optical System (figure 1)**

Reproducibility: ± 1% of scale or better

Response Time: 90 second

Filter wavelength: 210 to 1000 nano-meters

Sample pressure: Quartz window - 30 psig

Sapphire - 40 psig

Enclosure:

(6000) General purpose - sheet steel

(6020) Hazardous duty - condulet

Readout: 2-line alphanumeric vacuum

fluorescent display (VFD)

## TELEDYNE ANALYTICAL INSTRUMENTS

A Teledyne Technologies Company 16830 Chestnut Street City of Industry, California 91748, USA

TEL: 626-934-1500 or 888-789-8168
FAX: 626-934-1651 EMAIL: ask\_tai@teledyne.com

www.teledyne-ai.com

#### Warranty

Instrument is warranted for 1 year against defects in material or workmanship

NOTE: Specifications and features will vary with application. The above are established and validated during design, but are not to be construed as test criteria for every product. All specifications and features are subject to change without notice.

